

尺寸: 95mm*130mm



 
扫码关注官方微信, 购买放心服务贴心
Scan the code to follow official WeChat,
Purchase at ease and we provide caring service
官方网: www.aporo.cn
web: site www.aporo.cn

产品标准: GB8898-2011
Product standards: GB8898-2011


制造商: 深圳市金城伟业电子有限公司
Manufacturer: Shenzhen Jincheng Weiye Electronics Co., Ltd
地址: 深圳市宝安区福永街道福园一路天瑞工业园A8栋8楼东
Address: Building 8 East, Tianrui Industrial Park A8, Fuyuan First Road, Fuyong Street, Baoan District, Shenzhen
电话: 0755-29568556
Telephone: 0755-29568556
邮箱: help@aporo.cn E-mail: Help@aporo.cn

本说明书所示产品图片及文字功能已经详细核对, 如出现印刷错误, 本公司不承担因此产生的后果, 产品图片及详细功能参数请以实物为准。
The product picture and text functions shown in this specification have been checked in detail. If there is a printing error, the company will not bear the consequences arising therefrom. The product picture and the detailed mother-of-law function parameters should be subject to the material object.
APORO商标及LOGO均已注册, 受知识产权保护, 未经本公司允许不得仿冒违者必究。
APORO trademark and LOGO have been registered, protected by intellectual property rights, no counterfeiting without the Company's permission, violators will be prosecuted.
本公司保留对产品更正改进的权利, 届时恕不另行通知, 在法律允许范围内, 最终解释权归深圳市金城伟业电子有限公司所有。
We reserve the right to correct and improve our products without prior notice. To the extent permitted by law, the final interpretation right is vested in Shenzhen Jincheng Weiye Electronics Co., Ltd.

一、产品细节/Product details

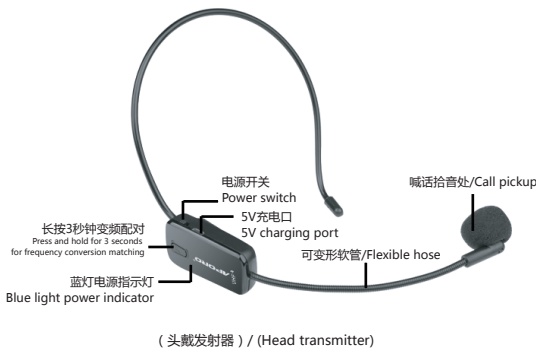

二、接收器连接示意图/Receiver connection diagram

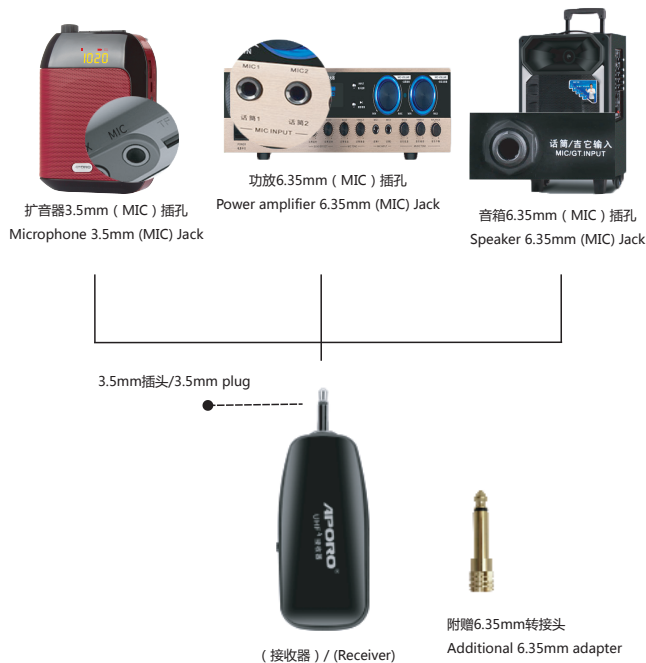 

APORO

UHF

无线麦克风

Ultra High Frequency
Wireless Microphone



Operation Manual

使用说明书

更多产品请登录 www.aporo.cn


三、使用步骤/Use steps

1. 发射器与接收器连接使用方法: 将发射器电源开关打开, 蓝灯显示长亮, 长按发射器上的“M”键3秒后, 蓝灯进入闪烁松开, 此时马上打开接收器 电源开关(长按1秒开机)进入无线配对中, 稍等几秒后发射 器和接收器蓝灯长亮, 此时已配对成功, 即可使用。
 2. 变频使用方法: 发射器与接收器连接成功后, 短按发射器上“M”键蓝灯 闪烁几下后长亮, 变频成功。
 3. 多台使用不串频使用方法: 同时使用只支持3 0台以下不串频, 不干扰! 切记! 多台同时使用必须先根据上述 (1. 发射器与连接 器连接使用方法) 步骤重新连接一次后, 再变频操作。如 1 0台同时使用, 先把第1台发射器短按1次“M”键变频, 第2台短按2次“M”键变频, 第3台短按3次“M”键变频, 以此类推到第1 0台和短按1 0次“M”键变频, 即可实现多台使用不串频, 不干扰问题。注明: 一定要按顺序来变频!
 4. 出厂复位设置: 长按下音量“+”不放, 将电源开关打 开, 此时蓝灯进入慢闪模式后松开, 立即打开接收器 电源 开关进入复位模式, 蓝灯慢闪数秒后长亮复位出厂设置成 功。 5. 低电提示: 当电量低时电源指示灯“蓝灯”快闪提示, 电 量低于1 0 %时会保护性关机。“蓝灯”灭, 蓝灯快闪请及 时关机充电。
1. How to connect the transmitter and receiver: turn on the power switch of the transmitter, and the blue light will be on for a long time. Long press the "m" key on the transmitter for 3 seconds, and the blue light will flash and release. At this time, turn on the power switch of the receiver immediately (long press for 1 second) and enter the wireless pairing. After a few seconds, the blue light of the transmitter and receiver will be on for a long time, and the pairing is successful.
 2. How to use frequency conversion: after the transmitter is successfully connected with the receiver, press the "m" key on the transmitter for a short time, the blue light will flash for a long time, and the frequency conversion is successful.
 3. Multiple use of non serial frequency use method: at the same time, only support less than 30 non serial frequency, no interference! Remember! If multiple units are used at the same time, they must be reconnected according to the above steps (1. How to connect the transmitter and connector) before frequency conversion operation. For example, if 10 transmitters are used at the same time, first press the "m" key once for frequency conversion of the first transmitter, press the "m" key twice for frequency conversion of the second transmitter, press the "m" key three times for frequency conversion of the third transmitter, and so on. If 10 transmitters are used and press the "m" key 10 times for frequency conversion, multiple transmitters can be used without series frequency and interference. Note: must be in order to frequency!
 4. Factory reset setting: press the volume "+" for a long time to turn on the power switch. At this time, the blue light will enter the slow flash mode and release it. Immediately turn on the receiver power switch to enter the reset mode. The blue light will be on for a long time after a few seconds of slow flash. Factory reset is successful. 5. Low power prompt: when the power is low, the "blue light" of the power indicator will flash. When the power is less than 10%, it will shut down and the "blue light" will go out. The blue light will flash. Please shut down and charge in time.

四、技术参数/Technical parameter

载波频率范围	639-897MHz	配对方式	出厂默认自动配对
发射功率	16db±1d	接收器电池容量	400mAh聚合物电池
频率响应	15Hz-15 KHz	接收器待机时间	大于6小时
调制方式	FM调制	工作距离	约80米 (无障碍空旷环境下)
工作频道	40个频段	接收灵敏度	-96dB±2db
Carrier frequency range	639-897MHz	Matching method	Factory default automatic pairing
Transmitting power	16db±1d	Receiver battery capacity	400mah polymer battery
frequency response	15Hz-15 KHz	Receiver standby time	More than 6 hours
modulation mode	FM modulation	Working distance	About 80 meters (barrier free open environment)
Work channel	40 bands	Receiving sensitivity	-96dB±2db

 五、正确佩戴示意图/Correct wearing diagram

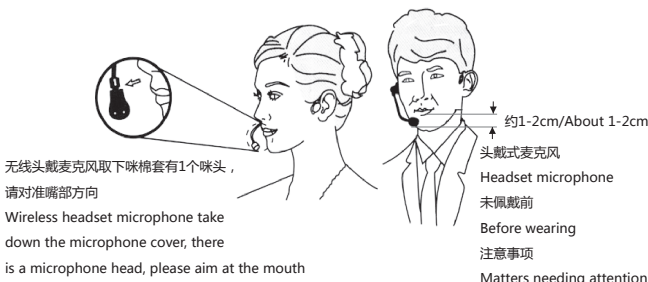

出厂标配/Factory standard



产品保修卡 Guarantee card

购买产品时, 请认真填写此卡, 并予以妥善保存。
Please fill in this card carefully and keep it properly.
用户档案
User file

用户姓名 User name		性别 Gender		年龄 Age	
通讯地址 Communication address					
联系电话 Contact number				邮编 Zip code	
购买地点 Place of purchase					
购买日期 Purchase date			销售单号 Sales order number		
品名及规格 Title and specification			机身编号 Fuselage number		
经销商签名 Dealer signature			用户签名 User signature		

1. 本公司所提供的产品, 非人为损坏, 实行一年保修;
2. 质量或修理事宜, 请及时与当地销售商联系!
3. 下列情形不享受保修服务:
 - a) 未按产品使用说明书要求使用、维护、保管而导致的人为损坏
 - b) 非本公司相关的技术人员拆机造成的损坏
 - c) 因不可抗拒力造成的损坏
1. The company's products, non-human damage, the implementation of one-year warranty;
2. Quality or repair matters, please contact the local seller in time!
3. Warranty service is not available under the following circumstances:
 - a) Man made damage caused by failure to use, maintain and keep the product in accordance with the instructions
 - b) The damage caused by the dismantling of the machine by the technicians not related to the company
 - c) Damage caused by force majeure

合格证
Certificate



检验员: A-001
Examination clerk