尺寸:95mm*130mm

1、本公司所提供的产品，非人为损坏，实行一年保修；
2、质量或修理事宜，请及时与当地销售商联系！
3、下列情形不享受保修服务：
a）未按产品使用说明书要求使用、维护、保管而导致的人为损坏
b）非本公司相关的技术人员拆机造成的损坏
c）因不可抗拒力造成的损坏
1. The company's products, non-human damage, the implementation of one-year warranty;
2. Quality or repair matters, please contact the local seller in time!
3. Warranty service is not available under the following circumstances:
a) Man made damage caused by failure to use, maintain and keep the product in accordance with the instructions
b) The damage caused by the dismantling of the machine by the technicians not related to the company
c) Damage caused by force majeure

扫码关注官方微信，购买放心服务贴心
Scan the code to follow official WeChat,
Purchase at ease and we provide caring service
官方网：www.aporo.cn
web：site www.aporo.cn

产品标准：GB8898-2011
Product standards: GB8898-2011

制造商：深圳市金城伟业电子有限公司
Manufacturer: Shenzhen Jincheng Weiye Electronics Co., Ltd
地址：深圳市宝安区福永街道福园一路天瑞工业园A8栋8楼东
Address: Building 8 East, Tianrui Industrial Park A8, Fuyuan First Road, Fuyong Street, Baoan District, Shenzhen
电话：0755-29568556
Telephone: 0755-29568556
邮箱：help@aporo.cn E-mail: Help@aporo.cn

本说明书所示产品图片及文字功能已经详细核对，如出现印刷错露，本公司不承担因此产生的后果，产品图片及详细功能参数请以实物为准。
The product picture and text functions shown in this specification have been checked in detail. If there is a printing error, the company will not bear the consequences arising therefrom. The product picture and the detailed mother-of-law function parameters should be subject to the material object.
APORO商标及LOGO均已注册，受知识产权保护，未经本公司允许不得仿冒,违者必究。
APORO trademark and LOGO have been registered, protected by intellectual property rights, no counterfeiting without the Company's permission, violators will be prosecuted.
本公司保留对产品更正改进的权利，届时恕不另行通知，在法律允许范围内，最终解释权归深圳市金城伟业电子有限公司所有。
We reserve the right to correct and improve our products without prior notice. To the extent permitted by law, the final interpretation right is vested in Shenzhen Jincheng Weiye Electronics Co., Ltd.

一、产品细节/Product details

（接收器）/ (Receiver)

（头戴发射器）/ (Head transmitter)

二、接收器连接示意图/Receiver connection diagram

APORO

UHF 无线麦克风
Ultra High Frequency Wireless Microphone

Operation Manual
使用说明书
更多产品请登入 www.aporo.cn

三、使用步骤/Use steps

1、发射器与接收器连接使用方法：将发射器电源开关打开后显示U06 ，U06为首次开机默认音量模式，音量模式下长按发射器上的 “M”键5-8秒后， 显示屏中间进行交替闪烁并松开手，此时马上打开接收器电源开关进入等待无线配对中，稍等几秒后发射 器显示U06和接收器蓝灯长亮，此时已配对成功，即可使用。

2、音量调节使用方法：开机后显示屏显示U06为音量模式，此时再按（+/-）键进行音量调节，带音量记忆功能。
3、变频使用方法：发射器与接收器连接成功后，短按发射器上 “M”键显示屏显示 C00 为变频模式，此时再按（+/-）键进行变频操作。

4、多台使用不串频使用方法：同时使用只支持30台以下不串频，不干扰！ 切记！多台同时使用必须先根据上述
（1、发射器与连接 器连接使用方法）步骤重新连接一次后，再变频操作。如 10台同时使用，先把第 1台发射器短按1次 “M” 键进入变频模式（+/-）键进行变频，第2台短按2次 “M” 键变频模式（+/-）键 进行变频，第3台短按3次 “M” 键变频模式（+/-）键进行变频，以此类推到第10台和短按10次 “M” 键 变频模式（+/-）键进行变频，即可实现多台使用不串频，不干扰问题。注明： 一定要按顺序来变频！

5，出厂复位设置： 长按下音量 “+” 键不放，然后将电源开关打 开，此时显示屏显示（RST）字样进入复位模式后松开，立即打开接收器电源 开关进入复位模式，发射器显示音量模式（U06）后复位出厂设置成功

6、发射器电量/充电/低电提示状态：当开机时显示以下数值为发射器电量状况（100 B75 B50 B25 B10）"显示屏外圈快闪提示进入低电, 请及 时关机充电，电 量低于10 %时会保护性关机，充电状态为红灯常亮，充满红灯灭。

7. 接收器电量/充电/低电提示状态：当开机时蓝灯闪烁为等待配对状态，蓝灯常亮为配对成功，蓝灯快闪为低电提示进入低电状态, 请及 时关机充电，电 量低于10 %时会保护性关机，充电状态为红灯常亮，充满红灯灭。

1. How to connect the transmitter and receiver: turn on the power switch of the transmitter and display u06. U06 is the default volume mode for the first time. In the volume mode, long press the "m" key on the transmitter for 5-8 seconds, and then flash alternately in the middle of the display screen and release your hand. At this time, turn on the power switch of the receiver immediately to wait for wireless pairing, After a few seconds, the transmitter displays u06 and the receiver blue light is on for a long time. At this time, it has been paired successfully and can be used.

2. Usage of volume adjustment: after power on, the display shows u06 as volume mode. At this time, press the (+ / -) key to adjust the volume, with volume memory function.

3. How to use frequency conversion: after the transmitter and receiver are successfully connected, briefly press the "m" key on the transmitter, and the display screen shows that C00 is frequency conversion mode. At this time, press again(+ / -) key for frequency conversion operation.

4. How to use multiple sets without serial frequency: when used at the same time, it only supports less than 30 sets without serial frequency and interference! Remember! When multiple units are used at the same time, they must be reconnected according to the above steps (1. Connection and use method of transmitter and connector) before frequency conversion operation. If 10 sets are used at the same time, first briefly press the "m" key of the first transmitter once to enter the frequency conversion mode (+ / -) key for frequency conversion, the second transmitter briefly press the "m" key twice to enter the frequency conversion mode (+ / -) key for frequency conversion, the third transmitter briefly press the "m" key three times to enter the frequency conversion mode (+ / -) key for frequency conversion, and so on to the 10th transmitter and briefly press the "m" key for frequency conversion mode (+ / -) key for frequency conversion, It can realize the use of multiple stations without serial frequency and interference. Note: frequency conversion must be carried out in sequence!

5. Factory reset setting: press and hold the volume "+" key for a long time, and then turn on the power switch. At this time, the display screen displays (RST) and releases it after entering the reset mode. Immediately turn on the receiver power switch to enter the reset mode. After the transmitter displays the volume mode (u06), reset the factory setting successfully.

6. Transmitter power / charging / low power prompt status: when the transmitter is powered on, the following values are displayed as the transmitter power status (100 B75 B50 B25 B10) "the flash prompt at the outer ring of the display screen indicates that the battery is low. Please shut down and charge in time. When the power is less than 10%, it will be shut down protectively. The charging status is that the red light is always on and the full red light is off.

7. Power / charge / low power prompt status of the receiver: when the receiver is powered on, the blue light flashes to wait for pairing. If the blue light is always on, the pairing is successful. If the blue light flashes quickly, it indicates that the receiver enters the low power state. Please shut down and charge in time. When the power is less than 10%, it will be shut down protectively. The charging status is that the red light is always on and the full red light is off.

四、技术参数/Technical parameter

载波频率范围	664-786MHz	配对方式	出厂默认自动配对
发射功率	16db±1d	接收器电池容量	450mAh聚合物电池
频率响应	15Hz-15 KHz	接收器待机时间	大于6小时
调制方式	FM调制	工作距离	约30-50米（无障碍空旷环境下）
工作频道	40个频段	接收灵敏度	-96dB±2db

Carrier frequency range	664-786MHz	Matching method	Factory default automatic pairing
Transmitting power	16db±1d	Receiver battery capacity	450mah polymer battery
frequency response	15Hz-15 KHz	Receiver standby time	More than 6 hours
modulation mode	FM modulation	Working distance	About 30-50 meters (barrier free open environment)
Work channel	40 bands	Receiving sensitivity	-96dB±2db

五、正确佩戴示意图/Correct wearing diagram

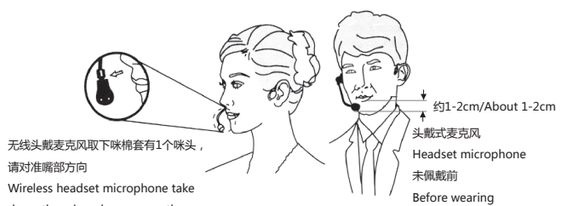

无线头戴麦克风取下咪棉套有1个咪头，
请对准嘴部方向
Wireless headset microphone take down the microphone cover, there is a microphone head, please aim at the mouth

头戴式麦克风
Headset microphone
未佩戴前
Before wearing
注意事项
Matters needing attention

出厂标配/Factory standard

产品保修卡
Guarantee card

购买产品时，请认真填写此卡，并予以妥善保存。
Please fill in this card carefully and keep it properly.
用户档案
User file

用户姓名 User name		性别 Gender		年龄 Age	
通讯地址 Communication address					
联系电话 Contact number				邮编 Zip code	
购买地点 Place of purchase					
购买日期 Purchase date			销售单号 Sales order number		
品名及规格 Title and specification			机身编号 Fuselage number		
经销商签名 Dealer signature			用户签名 User signature		